


# EGO™

POWER<sup>+</sup>FAN




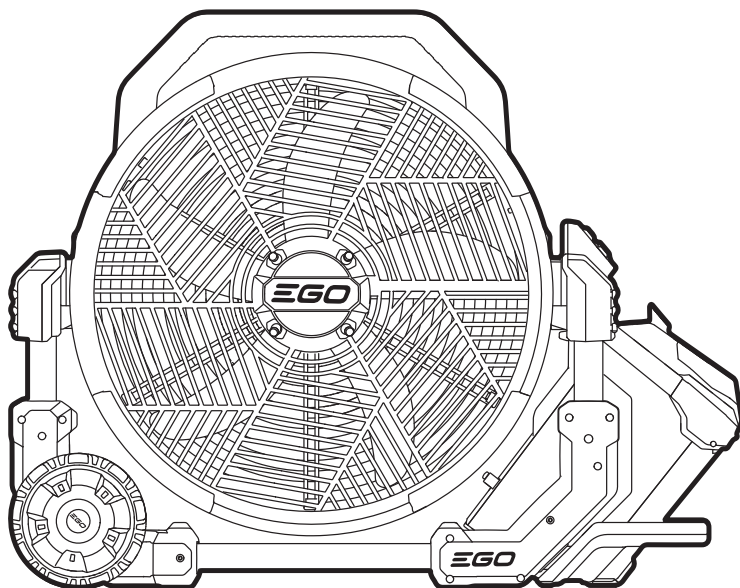










OPERATOR'S MANUAL

## 56 VOLT LITHIUM-ION CORDLESS MISTING FAN


MODEL NUMBER FN1800E

**⚠ WARNING:** To reduce the risk of injury, the user must read and understand the Operator's Manual before using this product. Save these instructions for future reference.

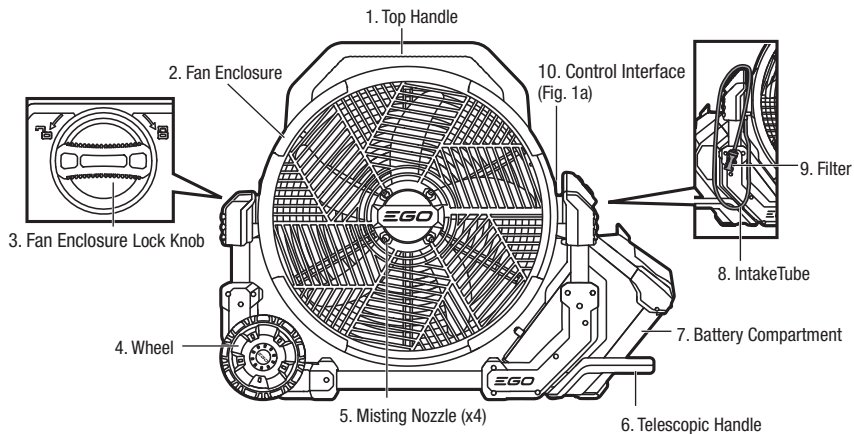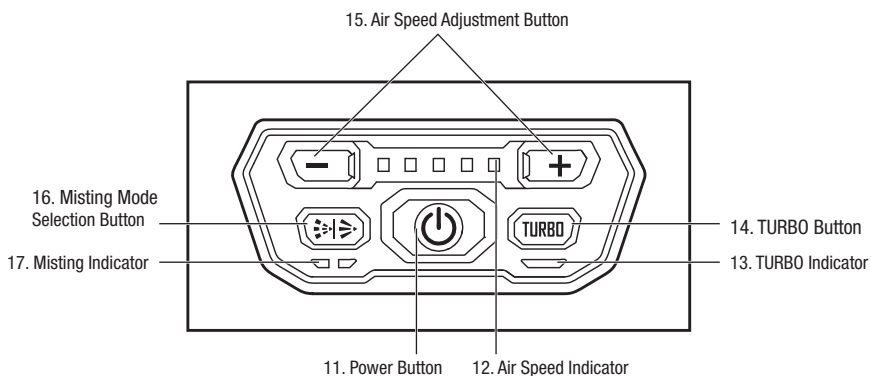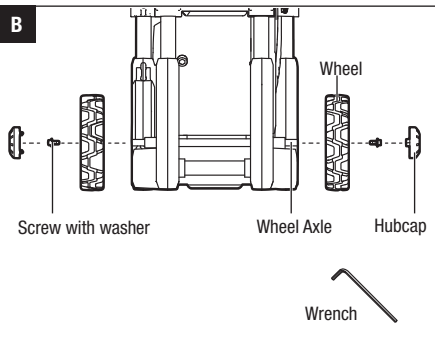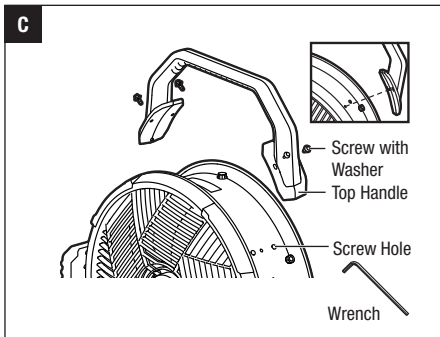
**A****A1****B****C**

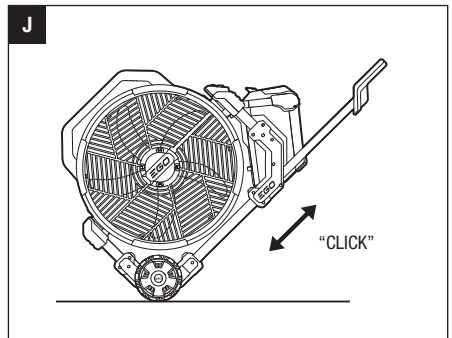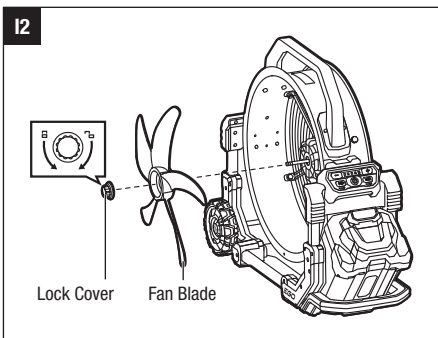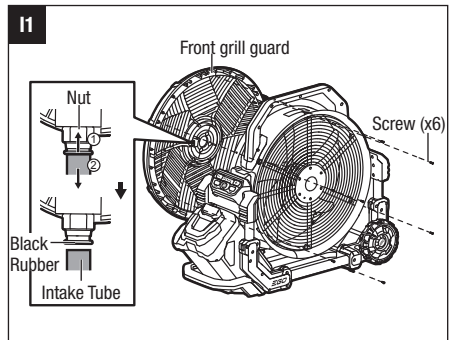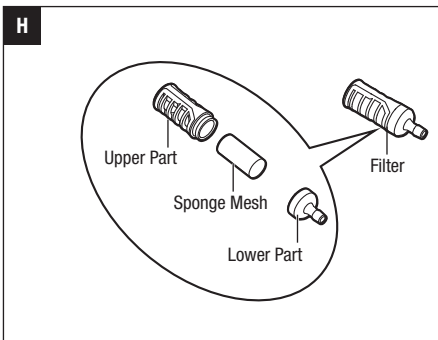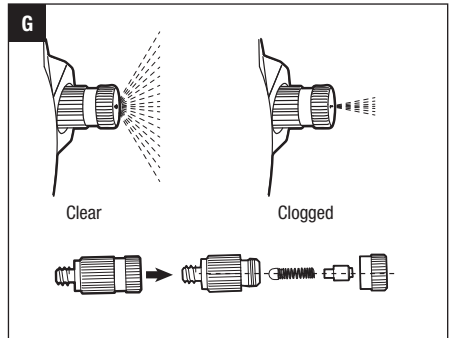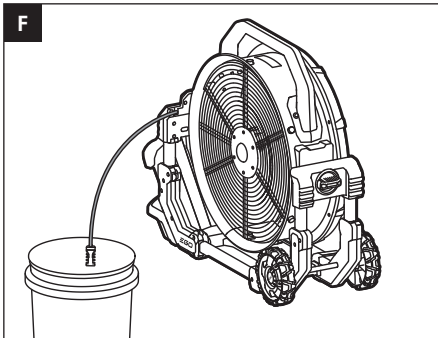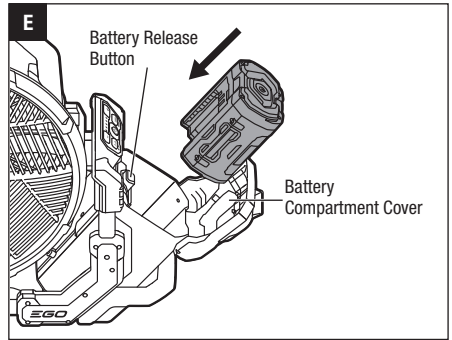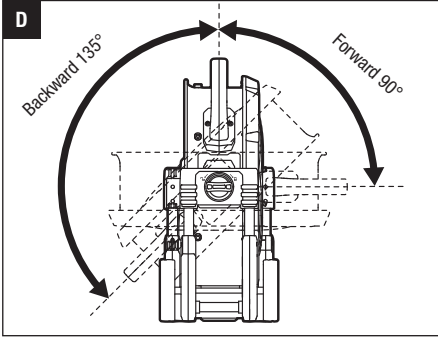

K1

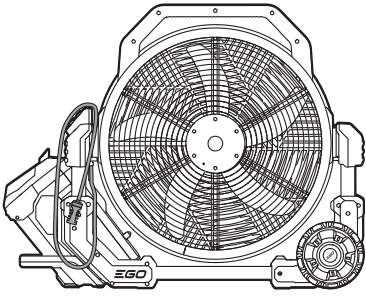

K2

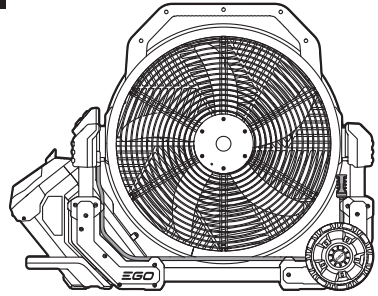

## READ ALL INSTRUCTIONS!



**READ OPERATOR'S MANUAL**

**⚠ WARNING:** To ensure safety and reliability, all repairs and replacements should be performed by a qualified service technician.

## SAFETY SYMBOLS

The purpose of safety symbols is to attract your attention to possible dangers. The safety symbols and the explanations with them deserve your careful attention and understanding. The symbol warnings do not, by themselves, eliminate any danger. The instructions and warnings they give are no substitutes for proper accident prevention measures.

**⚠ WARNING:** Be sure to read and understand all safety instructions in this Operator's Manual, including all safety alert symbols such as **"DANGER," "WARNING,"** and **"CAUTION"** before using this tool. Failure to follow all instructions listed below may result in electric shock, fire, and/or serious personal injury.

## SYMBOL MEANING

**⚠ SAFETY ALERT SYMBOL:** Indicates **DANGER, WARNING, OR CAUTION.** May be used in conjunction with other symbols or pictographs.

## SAFETY INSTRUCTIONS

This page depicts and describes safety symbols that may appear on this product. Read, understand, and follow all instructions on the machine before attempting to assemble and operate it.

	Safety Alert	Precautions that involve your safety
	Read & Understand Operator's Manual	To reduce the risk of injury, user must read and understand operator's manual before using this product.
	Rain Condition	Do not expose to rain.

IPX4	Ingress Protection Degree	Protection from splashing water
	Direct Current	Type or a characteristic of current
V	Volt	Voltage
cm	Centimeter	Length or size
m/s	Meters Per Second	Speed
L/h	Liter Per Hour	Flow Rate
°C	Celsius	Temperature
kg	Kilogram	Weight

## GENERAL SAFETY WARNINGS

### READ ALL INSTRUCTIONS BEFORE USING THIS PRODUCT!

**⚠ WARNING:** To reduce risk of fire, electric shock, or injury:

- **Know your misting fan. Read the instruction manual carefully. Learn the fan's applications and limitations as well as the specific potential hazards related to this fan.** Following this rule will reduce the risk of electric shock, fire or serious injury.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

### WORK AREA SAFETY

- **Do not operate fan in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.**
- **Keep children and bystanders away while operating an appliance.** Distractions can cause you to lose control.
- **Use caution when using in windy conditions.** Winds may carry mists into electrical wiring or devices.
- **Do not expose appliance to rain or wet conditions.** Water entering an appliance will increase the risk of electric shock.

## PERSONAL SAFETY

- **Stay alert, watch what you are doing and use common sense when operating appliance. Do not use the appliance while tired, upset, or under the influence of drugs, alcohol, or medication.** A moment of inattention while operating appliance may result in serious personal injury.
- **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.** Carrying appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.
- **Remove any adjusting key or wrench before turning the appliance on.** A wrench or a key left attached to a rotating part of the appliance may result in personal injury.
- **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the appliance in unexpected situations.
- **Dress properly. Do not wear loose clothing or jewelry. Keep your hair and clothing away from moving parts.** Loose clothes, jewelry or long hair can be caught in moving parts.
- **Verify that all connections are secure before operating the appliance.**
- **Do not let familiarity gained from frequent use of appliances allow you to become complacent and ignore the appliance safety principles.** A careless action can cause severe injury within a fraction of a second.

## USE AND CARE

- **Do not use the appliance if the switch does not turn it on and off.** Any appliance that cannot be controlled with the switch is dangerous and must be repaired.
- **Disconnect the battery pack from the appliance before making any adjustments, changing accessories, or storing appliance.** Such preventive safety measures reduce the risk of starting the appliance accidentally.
- **Store idle appliance out of the reach of children and do not allow persons unfamiliar with the appliance or these instructions to operate the appliance.** Appliances are dangerous in the hands of untrained users.
- **Maintain appliance and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the appliance's operation. If damaged, have the appliance repaired before use.** Many accidents are caused by poorly maintained appliance.

- **Use the appliance and accessories etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the appliance for operations different from those intended could result in a hazardous situation.
- **Keep handles and grasping surfaces dry, clean and free from oil and grease.** Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.

**⚠ WARNING:** To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.

## BATTERY TOOL USE AND CARE

- **Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.**
- **Use appliance only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.**
- Use only with EGO's battery packs and chargers listed in as below:

BATTERY PACK	CHARGER
BA1400, BA2800, BA4200, BA1400T, BA2800T, BA4200T, BA5600T, BA6720T	CH2100E, CH5500E, CH7000E

- **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** Shorting the battery terminals together may cause burns or a fire.
- **Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.** Liquid ejected from the battery may cause irritation or burns.
- **Do not use a battery pack or appliance that is damaged or modified.** Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- **Do not expose a battery pack or appliance to fire or excessive temperature.** Exposure to fire or temperature above 130°C may cause explosion.
- **Follow all charging instructions and do not charge the battery pack or appliance outside the temperature range specified in the instructions.**

Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.

## SERVICE

- **Have your appliance serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the appliance is maintained.
- **Never service damaged battery packs.** Service of battery packs should only be performed by the manufacturer or authorized service providers.

## SAFETY INSTRUCTIONS FOR CORDLESS MISTING FAN

- **Do not allow the fan to be used as a toy.** Close attention is necessary when used by or near children.
- **Children can fall into buckets and drown.** Keep children away from buckets with even a small amount of liquid.
- **ONLY use clean, cold water.**
- **Do not use this misting fan to spray pesticides, liquid fertilizers, chemicals, or any liquids other than clean water.** Spraying these substances could result in serious injury or illness to the operator or bystanders.
- **Never direct mist or water toward any electrical wiring or devices.**
- **Ensure that the battery compartment cover is completely closed to prevent water from contacting battery or entering battery port.**
- **Keep the appliance and its handle dry, clean and free from oil and grease. Always use a clean cloth when cleaning. Never use brake fluids, gasoline, petroleum-based products, or any strong solvents to clean your fan.** Following this rule will reduce the risk of loss of control and deterioration of the enclosure plastic.
- **Batteries can explode in the presence of a source of ignition, such as a pilot light. To reduce the risk of serious personal injury, never use any cordless product in the presence of open flame. An exploded battery can propel debris and chemicals.** If exposed, flush with water immediately.
- **Save these instructions.** Refer to them frequently and use them to instruct others who may use this fan. If you loan this fan to someone else, also loan these instructions to them to prevent misuse of the product and possible injury.
- Be aware that high humidity levels may encourage the growth of biological organisms in the environment.
- Do not permit the area around the humidifier to become damp or wet. If dampness occurs, turn the output of the humidifier down. If the humidifier output volume cannot be turned down, use the humidifier intermittently. Do not allow absorbent materials, such as carpeting, curtains, drapes, or tablecloths, to become damp.
- Never leave water in the reservoir when the appliance is not in use.
- Empty and clean the humidifier before storage. Clean the humidifier before next use.

**⚠ WARNING:** Micro-organisms that may be present in the water or in the environment where the appliance is used or stored, can grow in the water reservoir and be blown in the air causing very serious health risks when the water is not renewed and the tank is not cleaned properly every 3 days.

- Rechargeable batteries are to be removed from the appliance before being charged
- Exhausted batteries are to be removed from the appliance and safely disposed of
- If the appliance is to be stored unused for a long period, the batteries should be removed
- The supply terminals are not to be short-circuited.

## SAVE THESE INSTRUCTIONS

## SPECIFICATIONS

Voltage	56 V
Fan Blade Diameter	45.7 cm
Fan Speed Settings	6 (including "Turbo")
Max. Air Volume	7000 m <sup>3</sup> /h
Max. Air Speed	10.3 m/s
Misting Water Volume	I: 4.5 L/h
	II: 11.4 L/h
Recommended Storage Temperature	-20°C ~ 70°C
Weight (without battery pack)	10.4 kg

## PACKING LIST

PART NAME		QUANTITY
Misting Fan		1
Wheel Assembly	Wheel	2
	Hubcap	2
	Screw with washer	2
Top Handle Assembly	Top Handle	1
	Screw with washer	4
Wrench		1
Spare Nozzle		1
Operator's Manual		1

## DESCRIPTION

### KNOW YOUR MISTING FAN (Fig. A & Fig. A1)

1. Top Handle
2. Fan Enclosure
3. Fan Enclosure Lock Knob
4. Wheel
5. Misting Nozzle (x4)
6. Telescopic Handle
7. Battery Compartment
8. Intake Tube
9. Filter
10. Control Interface
11. Power Button
12. Air Speed Indicator
13. TURBO Indicator
14. TURBO Button
15. Air Speed Adjustment Button
16. Misting Mode Selection Button
17. Misting Indicator

## ASSEMBLY

**⚠ WARNING:** If any parts are damaged or missing, do not operate this product until the parts are replaced. Use of this product with damaged or missing parts could result in serious personal injury.

**⚠ WARNING:** Do not attempt to modify this product or create accessories not recommended for use with this fan. Any such alteration or modification is misuse and could result in a hazardous condition leading to possible serious personal injury.

**⚠ WARNING:** Always remove the battery pack from the product when you are assembling parts, making adjustments, cleaning, or when the product is not in use. Removing the battery pack will prevent accidental starting that could cause serious personal injury..

## UNPACKING

- This product requires assembly.
- Carefully remove the product and any accessories from the box. Make sure that all items listed in the packing list are included.

**⚠ WARNING:** Do not use this product if any parts on the packing list are already assembled to your product when you unpack it. Parts on this list are not assembled to the product by the manufacturer and require customer installation. Use of a product that may have been improperly assembled could result in serious personal injury.

- Inspect the tool carefully to make sure no breakage or damage occurred during shipping.
- Do not discard the packing material until you have carefully inspected and satisfactorily operated the tool.
- If any parts are damaged or missing, please return the product to the place of purchase.

## ASSEMBLING THE WHEELS (Fig. B)

1. Align the hole of one of the wheels with the wheel axle of the fan, and mount the wheel onto the axle.
2. Thread one of the wheel screws through the hole of the wheel into the wheel axle, then tighten the screw with the supplied wrench.
3. Snap the hubcap onto the wheel.
4. Assemble the other wheel following above steps 1 - 3.

## ATTACHING THE TOP HANDLE (Fig. C)

1. Align four supplied screws with the holes in the top handle and the holes in the fan enclosure.
2. Insert the screws and then tighten them with the supplied wrench.

## OPERATION

**⚠ WARNING:** Do not allow familiarity with this product to make you careless. Remember that a careless fraction of a second is sufficient to inflict serious injury.

**⚠ WARNING:** Do not use any attachments or accessories not recommended by the manufacturer of this product. The use of attachments or accessories not recommended can result in serious personal injury.



Before each use, inspect the entire product for damaged, missing, or loose parts, such as screws, nuts, bolts, caps, etc. Tighten securely all fasteners and caps and do not operate this product until all missing or damaged parts are replaced.

**⚠ WARNING:** Always remove the battery pack from the product when you are assembling parts, making adjustments, cleaning, or when it is not in use. Removing the battery pack will prevent accidental starting that could cause serious personal injury.

## APPLICATIONS

You may use this product for the purposes listed below:

- General ventilation in most household applications
- Outdoor cooling while connected to a water source

## ADJUSTING THE FAN ANGLE (Fig. D)

1. Grasp the top handle to hold the fan enclosure.
2. Rotate the fan enclosure lock knob counterclockwise to loosen the adjustable fan enclosure.
3. Tilt the adjustable fan enclosure forward or backward to your desired angle. The fan can pivot up to 90° forward up to 135° backward.
4. Rotate the lock knob clockwise to secure the fan enclosure at your desired angle.

## TO INSTALL/REMOVE BATTERY PACK (Fig. E)

### CHARGE THE BATTERY PACK BEFORE FIRST USE

1. Pull the battery compartment cover to open it.
2. **To install the battery pack**, align the ribs of the battery pack with the mounting slots in the battery compartment, and then press the battery pack into the battery compartment until it snaps into position.

**To detach the battery pack**, press the battery-release button to release the battery pack, and then lift the battery pack out of the battery compartment.

3. Push the battery compartment cover to close it. Ensure that it is completely closed to prevent water from contacting battery or entering battery port.

## TO START/STOP THE MISTING FAN

**NOTICE:** The initial factory setting for the air speed is level 3. The fan will save the last used air speed setting and will revert to it upon restart.

**IMPORTANT:** Turbo setting will not be saved.

**NOTICE:** The misting setting will not be saved, and by default will be off every time the fan is turned on.

## POWER BUTTON

- Press the power button briefly to turn the fan ON.
- Press the power button briefly again to turn the fan OFF.

## AIR SPEED ADJUSTMENT

### Normal Air Speed

- Press the “+” button to accelerate the air speed and press the “-” button to decrease the air speed. There are 5 speed levels.
- The air speed indicator displays green lights corresponding to the current speed levels.

### TURBO Mode

- Press the “TURBO” button, the TURBO indicator will light up green and the fan will shift into “TURBO” mode, i.e. the highest air speed.
- When in “TURBO” mode, press “TURBO” button again, the TURBO indicator will turn off and the fan will resume the previously active air speed.
- When in “TURBO” mode, press “-” button, the TURBO indicator will turn off and the fan will shift to the air speed level 5.

## MISTING FUNCTION

### USING THE FAN WITH A WATER BUCKET (NOT INCLUDED) (Fig. F)

**⚠ WARNING:** Children can fall into buckets and drown. Keep children away from buckets containing even a small amount of liquid.

**NOTICE:** Clean the bucket with soap and water before each use.

1. Disconnect the battery pack.
2. Place the bucket on a flat, level surface.
3. Add **ONLY** clean, cold water into the bucket. Do not overfill.
4. Immerse the filter end of the intake tube down into the water bucket.

**NOTICE:** Do not bend the intake tube, and always make sure the water flows smoothly through the tube.

5. Install the battery pack and close the battery compartment cover.
6. Press the power button to turn the fan ON.
7. Press the misting mode selection button to start misting:

- Press the misting mode selection button once and the misting indicator will light up two green lights which indicates the 'continuous' misting mode - misting all the time without stopping.

**NOTICE:** It may take around 15 seconds before you actually see the mist coming out of the misting nozzles the first time. This delay is due to the time it takes for water to flow from the water bucket to the nozzles.

- Press the misting mode selection button again and the misting indicator will light up one green light which indicates the 'intermittent' misting mode - misting for 5s every 10s.
- When the misting is in intermittent mode, press the misting mode selection button again and the misting indicator lights will turn off and the misting will stop.

**NOTICE:** When the misting operation is finished, pull the intake tube out of the water and run the fan in misting mode until all the water clears from the tube. This helps prevent the residual water in the tube from causing unexpected misting when the fan is started again.

### USING THE FAN WITHOUT MISTING

If desired, this product may be used as a fan only, when not connected to a water source. When not in use, always place the intake tube in its storage area (See section "STORAGE" in this manual) to protect it from damage and contamination.

### INTERNAL PROTECTION

When the misting function is activated but no water mist is coming out:

- The water pump will keep running for a short while, and then stop automatically to protect internal electronics.
- Depending on misting mode, the misting indicator will display one or two solid green lights for a short while, and then flash green light(s) continuously as an alert for the operator to:
  - a. Check if the intake tube is properly immersed into water.
  - b. Check if the misting nozzle(s) is clogged, and clean according to the "NOZZLE MAINTENANCE" chapter.
  - c. Press the misting mode selection button to restart misting.

## MAINTENANCE

**⚠ WARNING:** When servicing, use only identical replacement parts. Use of any other parts may create a hazard or cause product damage. To ensure safety and reliability, all repairs should be performed by a qualified service technician.

**⚠ WARNING:** To avoid serious personal injury, always remove the battery pack from the product when cleaning or performing any maintenance.

### GENERAL MAINTENANCE

Avoid using solvents when cleaning plastic parts. Most plastics are susceptible to damage from various types of commercial solvents and may be damaged by their use. Use clean cloths to remove dirt, dust, oil, grease, etc.

**⚠ WARNING:** Do not at any time let brake fluids, gasoline, petroleum-based products, penetrating oils, etc., come in contact with plastic parts. Chemicals can damage, weaken or destroy plastic which may result in serious personal injury.

### NOZZLE MAINTENANCE (Fig. G)

**⚠ WARNING:** Ensure that all misting nozzle maintenance is performed properly to prevent water leaks. The leaks can result in a slippery surface creating a slip and fall hazard or cause property damage.

#### To clear the nozzles

1. Turn off the fan and remove the battery pack.
2. Remove the clogged brass misting nozzles from the front grill guard of the fan enclosure by rotating them in a counterclockwise direction.
3. Disassemble each affected nozzle into parts.
4. **To remove any foreign particles** clogging or restricting the nozzles, flush the nozzle parts with water. **To remove scale (mineral) buildup**, clean the nozzle parts with white vinegar or other de-scaling agent as necessary.
5. Reassemble the nozzles.

**NOTICE:** To prevent clogging, make sure that the nozzle is assembled exactly as shown as Fig. F.

6. Reattach the clean nozzles to the front grill guard.

### FILTER MAINTENANCE (Fig. H)

Periodically examine the filter at the end of the intake tube to make sure that it is in good condition.

1. Pull the filter off of the intake tube.
2. Unscrew the filter into parts and take out the sponge mesh.
3. Rinse the sponge mesh or replace it if necessary.
4. Reassemble the filter and reconnect it to the intake tube.

### FAN ENCLOSURE MAINTENANCE (Fig. I1 & Fig. I2)

**⚠ WARNING:** Ensure the battery packs are removed from the product before removing the guard.

1. Loosen and remove the six screws to PARTIALLY lift the front grill guard off from the fan enclosure.

**⚠ CAUTION:** To prevent damage, do not remove the front grill guard completely without disconnecting the intake tube FIRST.

2. Depress the black rubber at end of the nut to pull out the intake tube.
3. Remove the front grill guard completely.
4. Rotate the fan blade lock cover clockwise to release the fan blade from the shaft.
5. Remove the fan blade.
6. Clean the fan blade and the enclosure interior as necessary.
7. Reassemble them in reverse order, and make sure:
  - the intake tube is properly connected to the nut.
  - the intake tube is placed properly into the slot on the grill guard.

### TRANSPORTING

**⚠ WARNING:** Always remove the battery pack from the fan when transporting. Removing the battery pack will prevent accidental starting that could cause serious personal injury.

- The fan is equipped with a top handle for carrying the fan for short-distance trips or crossing rough surface/terrain.
- For long-distance transport, use the telescopic handle to roll the fan. Use the top handle to tilt the fan and then pull out the telescopic handle until you hear a "click". When the telescopic handle is not used, push it into the tool (Fig. J).

### STORAGE

1. Remove the battery pack.
2. Clean the fan thoroughly.
3. Empty the intake tube and filter.

4. Place the intake tube into either storage position located at the back of the fan (Fig. K1 & Fig. K2).
5. Store the fan in a dry, well-ventilated area, out of the reach of the children. Do not store the fan on or adjacent to fertilizers, gasoline, or other chemicals.

### PROTECTING THE ENVIRONMENT



Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.

Contact your local government for information regarding the collection systems available.

If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

## TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
Tool does not work.	<ul style="list-style-type: none"><li>■ Low battery pack capacity.</li><li>■ The battery pack or the fan is too hot.</li></ul>	<ul style="list-style-type: none"><li>■ Charge the battery pack.</li><li>■ Turn off the fan and allow the fan and battery pack to cool.</li></ul>
There is no water misting and the misting indicator flashes two green lights.	<ul style="list-style-type: none"><li>■ The intake tube suctions no water, activating internal protection for the water pump inside the tool.</li><li>■ The misting nozzle(s) got clogged during operation, activating the internal protection for the water pump.</li></ul>	<ul style="list-style-type: none"><li>■ Check and ensure that there is enough water in the bucket and the intake tube is properly immersed into the water.</li><li>■ Clean the nozzle(s) according to the “<b>NOZZLE MAINTENANCE</b>” chapter and reassemble them as instructed.</li></ul>
Water leakage happens after fan enclosure maintenance.	<ul style="list-style-type: none"><li>■ The nut connecting with the intake tube got loose unexpectedly.</li></ul>	<ul style="list-style-type: none"><li>■ Open the fan enclosure according to the “<b>FAN ENCLOSURE MAINTENANCE</b>” chapter. Inspect and ensure that the nut is fully tightened.</li></ul>

## WARRANTY

### EGO WARRANTY POLICY

5 years warranty on EGO outdoor power equipment and 3 years warranty on EGO Power+ System battery packs and chargers.

**Please contact EGO customer service on Australia 1300 000 EGO(1300 000 346), New Zealand 0508 000 EGO (0508 000 346) any time you have questions or warranty claims.**

### LIMITED SERVICE WARRANTY

FOR FIVE YEARS from the date of original retail purchase, this EGO product is warranted against defects in material or workmanship. Defective product will receive free repair.

FOR THREE YEARS from the date of original retail purchase, the EGO Power+ System battery pack and charger are warranted against defects in material or workmanship. Defective product will receive free repair.

This warranty does not cover the blade, which is a part that can wear out from normal use within the warranty period.

- This warranty applies only to the original purchaser at retail and may not be transferred.
- The warranty period for any EGO product or part used for industrial, professional or commercial purpose is one year.
- This warranty is void if the product has been used for rental purpose.
- This warranty does not cover the damage resulting from modification, alteration or unauthorised repair.
- This warranty only covers defects arising under normal usage and does not cover any malfunction, failure or defect resulting from misuse, abuse (including overloading of the product beyond capacity and exposure to water or rain), accidents, neglect or lack of proper installation, and improper maintenance or storage.
- This warranty does not cover normal deterioration of the exterior finish, including but not limited to scratches, dents, paint chips, or to any corrosion or discoloring by heat, abrasive and chemical cleaners.

## HOW TO OBTAIN SERVICE

For warranty service, please contact EGO customer service on Australia 1300 000 EGO(1300 000 346), New Zealand 0508 000 EGO (0508 000 346). When requesting warranty service, you must present the original dated sales receipt. An authorised service center will be selected to repair the product according to the stated warranty terms.

### ADDITIONAL LIMITATIONS

Chervon Australia Pty Ltd ABN 36 165 077 501 (“Chervon”) warrants to the original domestic purchaser that this product will be free from defects in materials and workmanship for 5 years from date of purchase, and any battery or charger will be free from defects in materials and workmanship for 3 years from date of purchase. To make a claim, return the faulty item together with proof of purchase directly to your closest service agent or to the place of purchase. Any handling and transportation costs (and other expenses incurred in claiming this warranty) are not covered by this warranty and will not be borne by Chervon. The replacement product or part or repaired product will be made available for your collection at an address nominated by Chervon. Where a valid warranty claim is made, Chervon will replace the defective product or repair the fault. Where the product is repaired, Chervon may use refurbished parts. This warranty does not cover normal wear and tear, misuse or abuse. This warranty may also be further limited or voided as specifically detailed in the product Manual. Chervon has no other liability under this warranty. The benefits to you given by this warranty are in addition to other rights and remedies imposed by State and Federal legislation that cannot be excluded. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Chervon Australia Pty Ltd, Unit 14, 5 Kelletts Road, Rowville, VIC 3178.

Phone Number: Australia 1300 000 EGO(1300 000 346), New Zealand 0508 000 EGO (0508 000 346).

Email address: support@egopowerplus.com.au.





